

MUD-TRAKS® Connector Installation Guide

Tools Required: 2 open end 15/16 (24mm) wrenches



Step 1: Each connector set includes;
1 — Stud Plate (Flat washer and stud)
2 — Dished washers
2 — Nuts



Step 2: Slide Stud Plate with stud up through connector hole in mat.



Step 3: Place dished washer over stud.




Step 4: Hand tighten nut on stud.
Position open end wrench on stud head underneath mat.



Step 5: Wrench tighten nut on stud, holding bottom wrench until fixture is snug.



Step 6: The initial fixture is now installed.

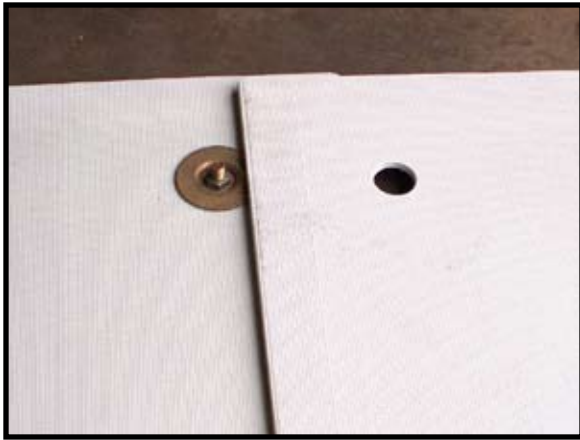

Step 7: Position second mat to line up with mat containing installed fixture.



Step 8: Align stud in connector hole.



Step 9: Place dished washer over stud.



Step 10: Hand tighten nut on stud.



Step 11: Tighten nut using wrench until snug.



Step 12: Connection fixture is now installed.